


S1200

English language

Leaflet No. **463064** rev 00

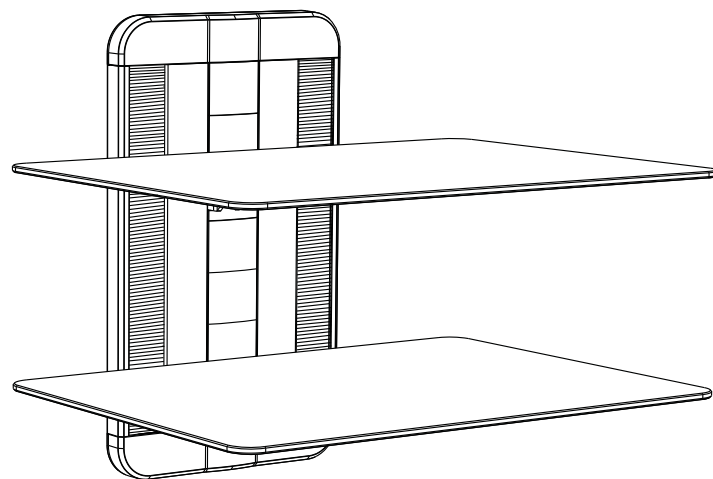

Read through all instructions before commencing installation.

If you have any questions about this product or issues with installation contact the customer services helpline before returning this product to the store.

AVF Group Ltd.

Road 30, Hortonwood Ind Est, Telford, Shropshire, TF1 7YE, England.

+44 (0) 1952 670009

0870 0609777 (UK)

AVF Incorporated.

3187, Cornerstone Drive, Mira Loma, CA 91752, USA.


1-800 667 0808 (USA)

Orbital Holdings Inc.


3187, Cornerstone Drive, Mira Loma, CA 91752, USA.

1-800 601 8450 (USA)


1 Boxed Parts

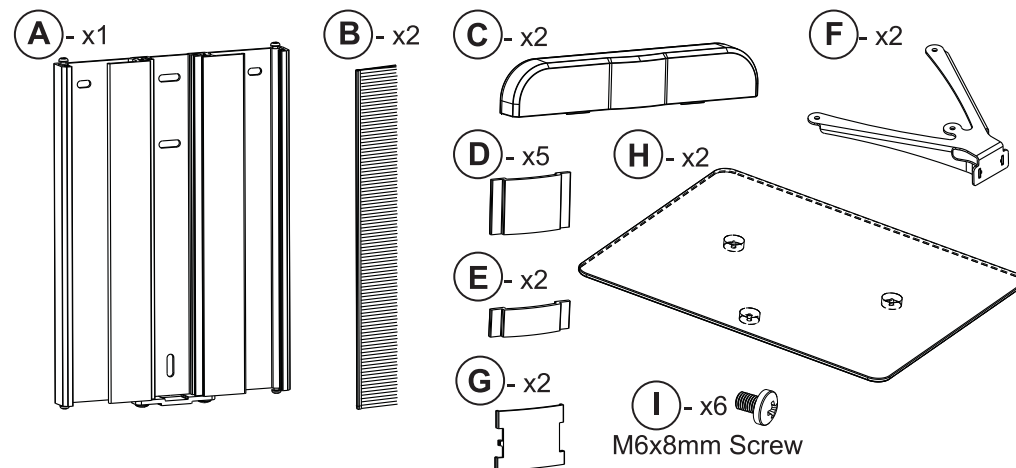

Wall Fixings: Parts to attach to the wall (type of wall will determine which fixings you require).

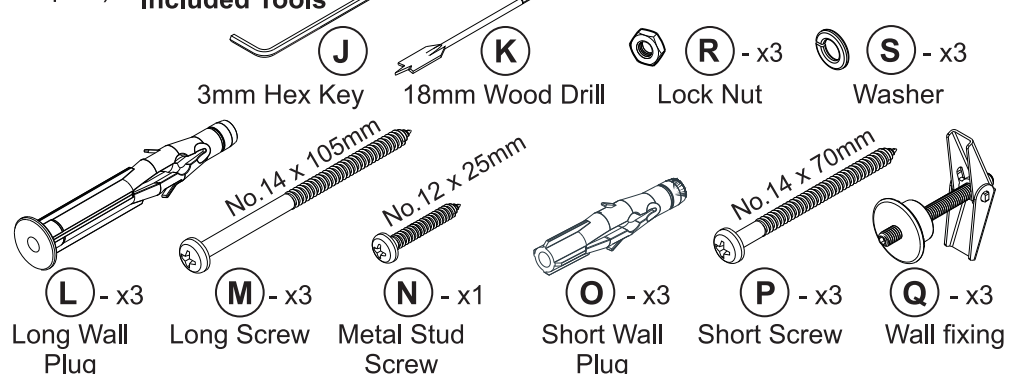

2 Tools Required

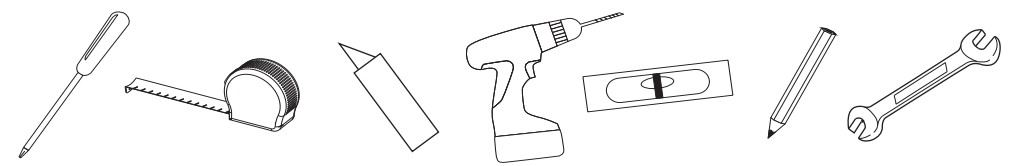


3 Planning & Preparation

Determine the wall type that you have (i.e. Brick/Stud/Plasterboard/Sheetrock). Ensure the drilling area is free from mains services (Gas/Electric/Water). Drill three 3mm pilot holes to verify the wall type and select the appropriate fixings (See Section 5).

4 Marking Wall For Drill Points

Use the wall bracket (A) as a template and position it on your wall. Ensure the bracket is level and mark the three drill points with a pencil.

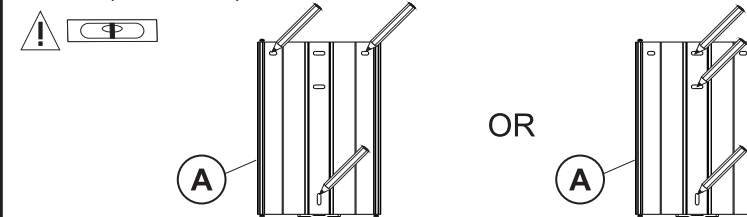


5 Fit Bracket To Wall

Use the correct fixings for your wall type. Mixing fixing types may be required for installations that span different wall types. DO NOT OVER TIGHTEN SCREWS.



Solid Wall

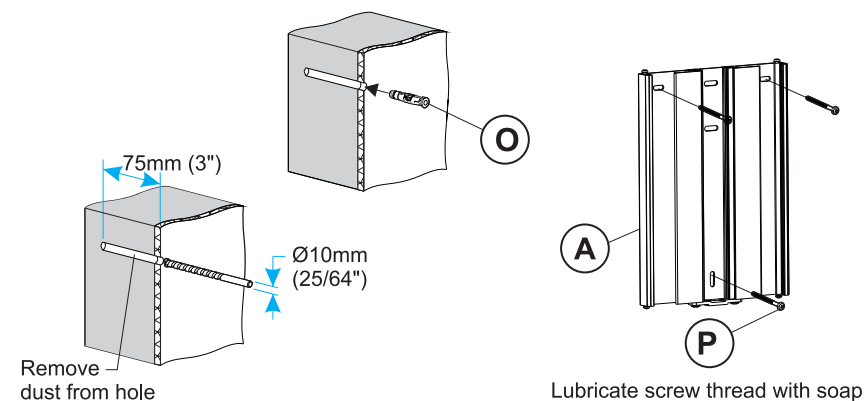

Dot & Dab

